MecLab[®] Technology for secondary schools





MecLab[®] Technology for secondary schools



Automation technology in school

Automation technology is one of the most important growth technologies in the world. Automated systems are to be found in virtually every area of life today.

Festo is the innovative leader in industry and process automation. And with our subsidiary Festo Didactic, we are the leading provider of learning and skills-development solutions.

With MecLab[®], the new learning system for secondary schools, pupils gain insights into one of the most significant fields of application for automation technology – production technology.

The three MecLab® stations represent simplified models of typical processes to be found in any automated production plant.

The learning objectives of $\mathbf{MecLab}^{\circledast}$

- With MecLab® a wealth of teaching topics and curriculum requirements can be covered, because its contents can be adapted accordingly:
- Introduction to industrial production
- Using technical terms correctly
- Planning, developing and setting up technical systems
- Understanding and using technical documentation; creating and using schematic diagrams, circuit diagrams, parts lists and technical drawings
- Building models and creating simulations
- Understanding and applying openand closed-control loop systems
- System thinking and understanding the interactions of subsystems
- Developing and constructing electric, electronic and pneumatic
- circuits – Understanding and using pneumatic and electrical actuators, sensors
- and controllers – Using computers as tools for programming and simulation



Realistic and fascinating

- MecLab[®] replicates real industrial production processes.
- Only industrial components are employed.
- The pupils are presented with a diverse range of modification, expansion and programming possibilities.

The tools required for making modifications are included. The wiring of the electrical components is simple and does not require tools, due to the use of standardised plugs. That lets you utilise MecLab[®] flexibly in your classes, however you prefer.

This award tells its own tale: Worlddidac Award 2008




Modular and flexible

The MecLab[®] stations can be used alone. Each one performs a practical function in itself, offering a wide range of learning possibilities and subject matter.

In addition, the stations can be joined together to form more complex "production lines". This results in many opportunities for project work.

Thus, after a short initial training period, pupils can take on the role of engineer and start working with MecLab[®]. By interchanging components, the standard exercises can be expanded and changed.

MecLab[®] The complete package

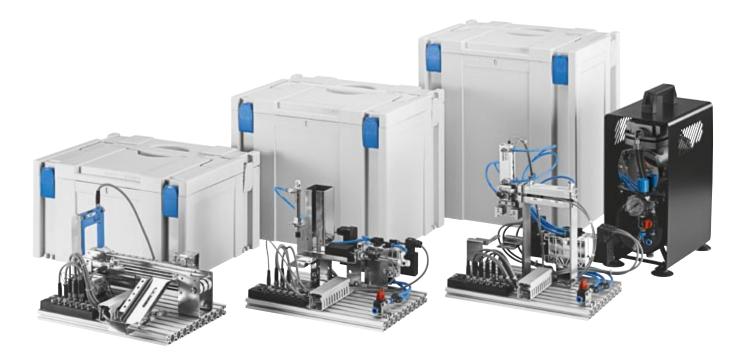

The hardware

MecLab[®] is delivered in practical, stackable systainers, which function as storage units as well as transport packaging.

MecLab[®] is delivered fully assembled and ready for immediate use.

MecLab[®] is sturdy and fully capable of withstanding the rigors of a school environment.

The individual stations have different functions:

- The Stacking Magazine station contains a workpiece storage container and a feed separator.
- The Conveyor station can transport and sort workpieces.
- The Handling station can grip the workpieces and deposit them at defined points.

The accompanying documents on CD-ROM

The complete package includes a CD-ROM with:

- Workbook: Teaching with MecLab[®]
 Technical book: Fundamentals of
- automation technology – Book of exercises with 5 – 7 exercises per station and prepared worksheets in *.doc format with solutions; these can be easily adapted to meet your particular requirements.
- Prepared PowerPoint presentations with extensive visual materials for use in class
- Videos
- Technical data for all components

Control with FluidSIM[®] software

The stations are controlled with FluidSIM[®] software and the EasyPort interface.

FluidSIM[®] is the application for creating and simulating pneumatic and electrical circuits and programmable logic controllers. With its universal PC interface, FluidSIM[®] can control the MecLab[®] stations directly. As a result, the pupils can follow a continuous functional chain from the circuit diagram to simulation to control.

Since FluidSIM® is supplied as a classroom licence, the number of pupils who can work with FluidSIM® at one time is limited only by the number of computers. They can use it to try out their solutions in simulation before testing them on the real station. Moreover, FluidSIM® provides information at the click of a mouse button about all components, and many informative animated sequences.


The complete package


Contains everything you need for working with MecLab®:

- 1 Stacking Magazine station
- 1 Conveyor station
- 1 Handling station
- 1 compressor 230 V with connector for DE, FR, NO, SE, FI, PT, ES, AT, NL, BE, GR, TR, IT, DK, IR, ID or 1 compressor 110 V with connector for US, CA, Central America, BR, CO, YU, EC, KR, TW, TH, PH, JP
- 3 x EasyPort to connect the stations to the computer
- 3 x power supply unit with connector for DE, FR, NO, SE, FI, PT, ES, AT, NL, BE, GR, TR, IT, DK, IR, ID or 3 x power supply unit with connector for US, CA, Central America, BR, CO, YU, EC, KR, TW, TH, PH, JP
- FluidSIM[®]
- Documents on CD-ROM
- Workpieces
- Tools
- Screw set
- Systainers

Complete package 230 V 549786 110 V 556276

MecLab[®] The Stacking Magazine and Conveyor stations

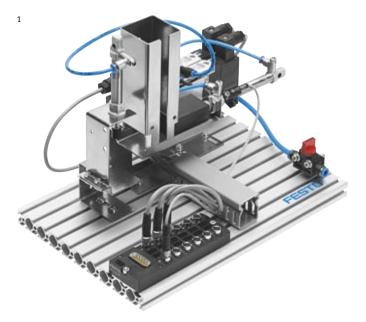

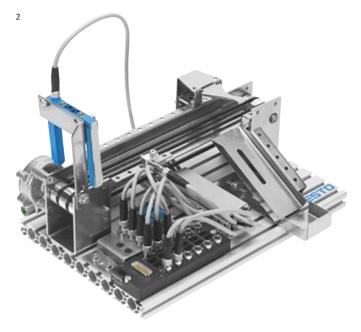

1 Stacking Magazine station

Functions

In any automated production line, workpieces must be stored and fed into the production process in an orderly way. In MecLab® that is the job of the Stacking Magazine station. It can store both workpieces (lid and can) in the arrangement desired, and can separate them out for feeding. The workpieces stored in the tower magazine are pushed out by the horizontally positioned cylinder. The vertically positioned cylinder can then replicate a press-fit process (e.g. pressing a lid onto a can). All processes are controlled electro-pneumatically. A magnetic limit switch can be used to record the position of a cylinder.

Technical learning objectives

- Fundamentals of pneumatics
- Single-acting cylinders
- Double-acting cylinders
- Solenoid valves
- Sensor technology magnetic limit switches
- Connecting tubing and wiring
- Relay control systems

Scope of delivery

- Stacking magazine module
- Press-fit unit module
- Multi-pin plug distributor
- 2 solenoid valves
- 2 cylinders
- 1 magnetic limit switch
- Aluminium slotted assembly board
- Tool set
- Workpieces
- Systainer
- Equipment trays
- CD with FluidSIM® and documents

2 Conveyor station

Functions

Transporting workpieces from one manufacturing station to the next is an important task in production. In the real world, driverless transport systems, forklift trucks and above all conveyor belts are used for this purpose. The conveyor in MecLab[®] allows realistic simulation of an industrial workpiece transport system. The drive motor can run forwards and backwards; workpieces can be detected with the sensors and distinguished from one another. The solenoid allows workpieces to be separated or rejected onto the slide.

Technical learning objectives

- Activation of direct currentmotors
- Inductive sensors
- Opto sensors
- Relay circuits
- Polarity reversal circuits
- PLC programming
- Control using logic operations
- Construction and wiring

Scope of delivery

- Conveyor belt module with
- DC motor
- Solenoid as stopper/deflector
- Multi-pin plug distributor
- Inductive sensor
- Opto sensor (light barrier)
- Aluminium slotted assembly board
- Tool set
- Workpieces
- Systainer
- Equipment trays
- CD with FluidSIM[®] and documents

1 Stacking Magazine station	548704
Necessary accessories	
Control package	549787
Compressor → Page 7	
2 Conveyor station	548705
Necessary accessories	
Control package	549787

MecLab® Handling station und Expansion set

3 Handling station

Functions

No matter whether it's a simple depositing operation or highly complex assembly work - handling systems are always involved. Handling devices range from simple, two-axis handlers up to highly complex industrial robots with six axes. The handler in $\ensuremath{\mathsf{MecLab}}\xspace^{\ensuremath{\$}}$ consists of pneumatic cylinders with plain-bearing guides and has two axes. The workpiece is held by a gripper which is likewise pneumatically driven. The handler can transport the workpiece from one station to another or can join two workpiece halves together.

Technical learning objectives

- Fundamentals of pneumatics
- Double-acting cylinders
- Gripper
- Solenoid valves
- Sensor technology magnetic limit switches
- Connecting tubing and wiring
- Relay control systems
- Control with logic
- PLC controllers
- Sequencing

Scope of delivery


- Handling module
- 3 solenoid valves
- 4 magnetic limit switches
- 2 pneumatic cylinders with
- plain-bearing guide – 1 pneumatic gripper
- Multi-pin plug distributor
- Aluminium slotted assembly board
- Tool set
- Workpieces
- Systainer
- Equipment trays
- CD with FluidSIM[®] and documents

4 MecLab® Expansion set

This expansion set contains a range of components for realising your own project ideas. All in a practical Systainer, of course.

Content

- Two double-acting cylinders with one-way flow control valves
- 2 solenoid valves
- 1 diffuse sensor
- 2 magnetic limit switches
- 1 profile kit
- 1 profile plate
- 1 electrical button
- 1 electrical switch
- 1 indicator light

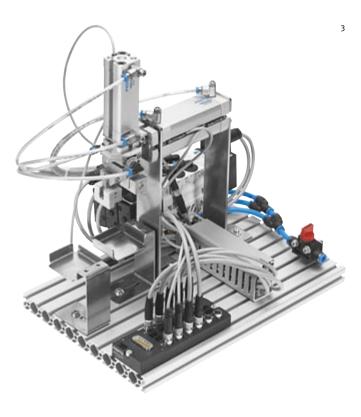



3 Handling station	548706
Necessary accessories	
Control package	549787
Compressor → Page 7	
4 MecLab Expansion set	556245

1

2

3

MecLab[®] Control options











1 The control package EasyPort Mini with power supply unit and connecting cables The control package contains everything you need for controlling

MecLab[®]: EasyPort Mini

- 6 digital input and output channels
- Maximum current per output
- channel 0.7 A, 24 V – Digital input switching threshold 12 V
- Power supply 24 V DC ±10 %,
 3 VA power consumption
- Status LED to indicate the operat-
- USB interface to connect to a PC via mini USB socket
- Including USB connecting cable
- Short circuit proof
- Power supply unit
- 24 V DC output voltage
 output current max. 1.88 A
- supply voltage 100 24 0 V, 1.5 A,
- 50 60 Hz
- Short circuit proof

Order no. 549787

Necessary accessories Power cable → Page 7

2 LOGO! Trainer Package 24 V

FluidSIM® contains a software-based minicontroller, e.g. as an introduction to the LOGO!, the minicontroller from SIEMENS. We offer an attractively priced set of 5 LOGO! modules. For industrial colleges and training centres.

- Package includes:
- Set of 5 LOGO! 12/24RC
 Programming software LOGO! Soft Comfort
- 1 USB programming cable
- Order no. 556235

Set of 4 LOGO! USB PC cables (without illustration)

Order no. 556237

3 Connecting cable

Connecting cable with 15-pin sub-D connector and free cable ends.

- For connecting a Logo! to the multipin plug distributor of a MecLab[®] station.
- Connecting cable for the end-position controller SPC 11 with 4 mm safety plugs.
- Order no. 177673

4 FC 100 EduTrainer®

The FC 100 mini control system combines three functions in one unit:

- Convenient handheld control unit
 At the push of a button, up to 8 digital inputs and outputs can be set and deleted. The status of the outputs and of up to 8 digital inputs is conveniently shown on the display.
- Simple programming via "teach-in"

In recording mode, the FC 100 records the user's set and delete commands and saves the relevant entry screen as a step enabling condition. Thus, a PLC program can be created simply and played back again and again.

- CodeSys compatible PLC
- The FC 100 is also a fully-fledged PLC with 8 digital inputs, 8 digital outputs and an Ethernet interface. The user can create his own PLC programs in accordance with IEC 61131 or with C++ and run them on the FC 100 over the serial interface and the supplied CodeSys software. The FC 100 is powerful enough to control an MPS[®] Station, for example. Operation is carried out via the FC 100's display.

Includes CD ROM with operating instructions and CodeSys demo. Limited to 2 hours operating time, restart required thereafter. Order no. 548676

Connecting cable SysLink – Sub-D (without illustration)

Cable for connection MecLab® stations with sub-assemblies that have a 24-pin SysLink plug. Order no. 560752

5 Training program LOGO! Training

This training program provides an introduction to logic functions. First of all, AND & OR functions and their processing are shown in function tables. Other basic control functions such as memory, timer and counter functions round off the contents. The second part starts by covering the basics of open-and closed-loop control circuits and describes the elements of a controller. It then takes a detailed look at minicontrollers with their features and areas of application.

From the contents:

- Basic technical functions (AND & OR function, memory function, timer function, counter function)
- Digital minicontrollers (differentiation between open- and closedloop control)
- Control components
- Positioning with digital minicontrollers
- Design and function of a minicontroller
- Cyclical programme processing
- Areas of application
- Programming languages

Training time: approx. 2 hours

E.g. single licence on CD-ROM, with online activation DE/EN/ES/FR Order no. 540941 with network licence connector DE/EN/ES/FR Order no. 540943

MecLab[®] Compressors and power supply units

1

1 Compressor for MecLab®

Low-cost compressor for MecLab[®]. Only 54 DB (A), therefore well suited for use in classrooms.

- Supplies up to 4 stations.
- Pressure: max. 400 kPa (4 bar)
- Suction capacity: 14 l/min
 Reservoir capacity: 2,5 l
- Dimensions: 310 x 150 x 370 mm

Design: 230 V/50 Hz, 135 W With mains cable suitable for: DE, FR, NO, SE, FI, PT, ES, AT, NL, BE, GR,TR, IT, DK, IR, ID Order no. 548707

Design: 110 V/60 Hz, 70 W With mains cable suitable for: US, CA, Central America, BR, CO, YU, EC, KR, TW, TH, PH, JP Order no. 556275

2 Compressor

Oil-lubricated, extremely quiet (45 dB (A)) compressor. Ideally suited for use in classrooms. With pressure regulator and water separator. Supplies up to 8 stations. – Pressure: 800 kPa (8 bar)

- Performance: 50 l/min
- Reservoir capacity: 25 l
- Compressed air outlet: 1⁄4"

Design: 230 V/50 Hz With power cable suitable for: DE, FR, NO, SE, FI, PT, ES, AT, NL, BE, GR, TR, IT, DK, IR, ID, Order no. 91030

Design: 100 – 120 V/50 – 60 Hz	
With fully insulated socket	
Order no.	565440
Necessary accessories	
Mains cable	

Accessories: Coupling socket, coupling plug, tubing Order no. 102725

3 Tabletop power supply unit

- Input voltage: 85 265 V AC (47 – 63 Hz)
- Output voltage: 24 V DC,
- short-circuit-proof
- Output current: max. 4.5 A

output current max ris ri	
– Dimensions: 115 x 155 x 200 mm	
Without power cable	
Order no.	162416
With power cable, 1.3 m, suitable for:	
DE, FR, NO, SE, FI, PT, ES, AT, NL, BE, GR,	
TR, IT, DK, IR, ID	
Order no.	162417
US, CA, Central America, BR, CO, EC, KR,	
TW, TH, PH, JP	
Order no.	162418
GB, IE, MY, SG, UA, HK	
Order no.	162419
AU, NZ, CN, AR	
Order no.	162380
СН	
Order no.	162381
ZA, IN, PT, SG, AE, HK, (GB)	
Order no.	162382

4 Power cable

One side designed as a connector and one side with a country-specific plug. DE, FR, NO, SE, FI, PT, ES, AT, NL, BE, GR, TR, IT, DK, IR, ID Order no. 247661 US, CA, Central America, BR, CO, EC, KR, TW, TH, PH, JP Order no. 350362 GB, IE, MY, SG, UA, HK Order no. 350363 AU, NZ, CN, AR Order no. 350364 СН Order no. 350366 ZA, IN, PT, SG, AE, HK, (GB) Order no. 350367









MecLab[®] **Extensions for sensors**

1 2 3 10 5





With these components, new functions can be implemented with MecLab[®]. The perfect extension of MecLab® for project work.

1 Connecting cable between **MecLab®** stations

Cable data connection between two MecLab® stations. Connects the input channel of one station to the output channel of another station. Length 0.5 m, with two 3-pin M8 plugs. Order no. 549790

2 Sensor/actuator cable M8/M8, 50 cm

Extension cable with 3-pin M8 plug connector or socket for extending sensor or actuator cables. Order no. 175488

3 Light barrier

Fork light barrier, fork gap 50 mm, complete with connecting cable and mounting accessories. Order no. 549791

4 Retro-reflective sensor

Fibre-optic diffuse sensor, complete with optical fibres, connecting cable and mounting accessories. Order no. 549792

5 Inductive sensor

Inductive sensor, cylindrical design with M5 male thread, 0.6 mm sensing distance, complete with connecting cable and mounting accessories. Order no. 549793

6 Tool set

The tool set is an aid to easy working on stations.

- A practical mini-systainer includes:
- 200 mm steel rule
- Open-jawed spanners size 7, 8, 9,10
- Adjustable spanner
- Side cutter
 - Insulation-stripping pliers
 - Wire end sleeve pliers
 - Screwdriver set, hex, 1.5 6
 - Screwdriver, hex, 0.9; 1.3 - Screwdriver, cross-head, PZ02 - short
 - Screwdriver, flat, 2.5 x 75;
 - 4.0 x 100
 - Screwdriver, flat, 1.2 1.6
 - Tubing cutter
 - Fibre-optic cable cutter - Workpiece, red, black, silver
 - 100 x cable binders 2.5 x 100
 - 100 x wire end sleeves 0.25
 - 100 x wire end sleeves 0.75
 - Order no. 539767

7 Magnetic limit switch

Limit switch for detecting the pneumatic cylinder piston position, for round and profile cylinders, with connecting cable. Order no.

543861

8 Mounting of proximity switches on circular cylinders

Kit for magnetic limit switch, Order no. 543861, on circular cylinders. Order no. 175092

9 Magnetic limit switch for gripper

Limit switch for detecting end positions at the gripper on the Handling station. Order no. 526679

10 Signal input/output

- 1 electrical button
- 1 switch
- 1 indicator light each
- Complete with mounting materials and connecting cable.

Order no.





6

MecLab[®] **Extensions for actuators**

1 Stopper/deflector

Solenoid for mounting on both sides of the conveyor, stopper or deflector function, complete with connecting cable and mounting accessories. Order no. 549795

2 Bistable 4/2-way solenoid valve

Manual override with detent, complete with fittings, silencer, mounting bracket and mounting screws. Order no. 549803

3 Monostable 4/2-way solenoid valve

Monostable 4/2-way solenoid valve, can be converted to 3/2-way function, manual override with detent, complete with fittings, silencer, mounting bracket and mounting screws. Order no. 549804

4 Stamping unit

Press-fit unit for attaching to the stacking magazine station or conveyor, comprising single-acting cylinder with 25 mm stoke and 10 mm diameter, complete with one-way flow control valve, mounting bracket and mounting screws. Order no.

549805

5 Double-acting cylinder

Double-acting cylinder, 10 mm diameter, 50 mm stroke, complete with one-way flow control valves, foot mounting and mounting bolts. 556248 Order no.

6 Vacuum gripper

Handling station vacuum gripper kit as a substitute for the mechanical gripper, complete with vacuum generator, 20 mm diameter suction gripper and mounting accessories. Order no. 549796 1

2

3

4

7 Stop cock

Manually operated stop cock with 3/2-way function for tubing diameters of 6 mm, complete with mounting bracket and mounting screws. 549809 Order no.

8 T-distributor

T-distributor for plastic tubing, 2 of each for tubing diameters 4 mm and 6 mm.

Order no.	549810

9 Plastic tubing

4 x 0.75 Silver 10 m	151496
3 x 0.5 Silver 5 m	197118
6 x 1 Silver 5 m	152963


Minimum order quantity/packaging unit quantity: 50 m

4 x 0.75 Silver	152584
4 x 0.75 Blue	159662
4 x 0.75 Black	159663
4 x 0.75 Red	178410
4 x 0.75 Yellow	178417
4 x 0.75 Green	178424

10 Blanking plugs

Blanking plug for sealing QS-4 fittings of valves, for example. Nominal diameter 4 – QSC-4H

Minimum order quantity/packaging unit quantity: 10 pieces Order no. 153267

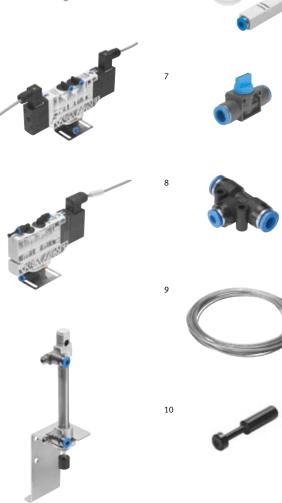





1


2

3

6

MecLab[®] Mechanical components

.....

















1 Slide

Slide for transporting or storing workpieces, 40 mm in diameter, for maximum 3 workpieces, mounting surface for sensors and actuators Complete with mounting accessories. Order no. 549797

2 Tray, low

Holding tray for retaining workpieces 40 mm in diameter and 39 mm in height. Complete with mounting accessories. Order no. 549798

3 Tray, high

Holding tray for retaining workpieces 40 mm in diameter and 62 mm in height. Complete with mounting accessories. Order no. 549799

4 Workpiece set

Workpiece set consisting of 6 plastic cans in silver, red and black (2 of each), diameter 40 mm, height 25 mm, and 6 lids. Order no. 549800

5 Rail

Cover for ejecting opening in the conveyor, length 140 mm, with mounting surface for sensors or actuators. Complete with mounting accessories. Order no. 549801

6 Profile connector

Connector for two aluminium slotted assembly boards with 20 mm grid dimension. Complete with mounting screws. Order no. 549802

Screw kit MecLab®

Bag of replacement screws and T-head nuts (without illustration). Order no. 556255

7 Assembly kit

Selection of aluminium profiles, 20 x 20 mm in lengths of 140 and 70 mm. Complete with mounting materials. Order no. 556247

8 Profile plate for MecLab®

Profile plate with dimensions 200 x 300 mm, thickness 20 mm, slot spacing 20 mm. Complete with self-adhesive rubber feet. Order no. 556246

9 Systainer

Stackable interlocking case system, made of light grey plastic with light blue snap fasteners.

Size 0 (Mini-Systainer): 50 x 248 x 158 mm	
Order no.	533014
Größe 1: 72 x 377 x 277 mm	
Order no.	526714
Size 2: 124 x 377 x 277 mm	
Order no.	526715
Size 3: 176 x 375 x 274 mm	
Order no.	526716
Size 4: 279 x 377 x 272 mm	
Order no.	526717
Size 5: 395 x 360 x 272 mm	
Order no.	544375
Soft foam insert for lid	
(for Systainer sizes 1 – 3)	
Order no.	526814
(Interior dimensions W x H x D	
respectively)	

10 Trolley for Systainer

Trolley for transporting Systainers sizes 1 to 5, can carry up to 5 Systainers.

With 2 adjustable heights: height 1: 105 cm, height 2: 97.5 cm. Tare weight 4 kg, load bearing capacity 50 kg. Order no. 549788

11 Dolly truck for Systainer

Dolly truck for transporting Systainers sizes 1 to 5. 4 castors with a brake. Order no. 549789

Rubber ring conveyor

The conveyor belt of the conveyor station is a wearing part and deliverable as a spare part (without illustration). Order no. 701221

MecLab® Digital training programmes and print media



Digital training programmes

Excellent solutions for ...

- learning and teaching
- programming
- experimentation
- simulation
- visualisation
- management
- play
- operation and observation

... and more in digital format.

To complement the teaching potential of MecLab[®], we recommend the

following learning programs: – WBT Fascination of technology

- WBT LOGO! Training
- WBT Actuators DC motor
- WBT Open- and closed-loop control
- WBT Pneumatics
- WBT Electropneumatics
- WBT Electrical engineering 1 and 2
- WBT Electronics 1 and 2
- WBT Sensor technology 1 and 2

Detailed information and free demo versions: www.festo-didactic.com

Courseware

Theory and practice – tailored to meet your needs, we have a wide range of textbooks and workbooks, dictionaries, sets of overhead transparencies, posters and other work materials. Our recommendations for MecLab[®]:


- Textbook: Pneumatics, Basic level
 Textbook: Electropneumatics, Basic level
- Textbook: Proximity sensors
 Practical knowledge:
- Basic pneumatic controllers
- Set of posters on pneumatics

Detailed information, free sample extracts, and online download of books: www.festo-didactic.com

www.festo-didactic.com 11

The fascination of technology

LOGO! Training

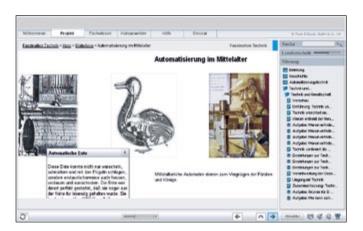

This exciting journey through the history of technology shows how inventions have changed the world. New forms of work have been created: from the hunter to the engineer. "The fascination of technology" is an interactive journey through the world of automation. The program contains many different multimedia components to help you on your journey. Experience the excitement of discovery and learning – this is pure edutainment! The programme consists of 4 modules:

Technology and automation

Every day we come across technology and automated processes. This introduction illustrates, with practical examples, just how much life is affected by technology, in earlier times too but particularly today.

The history of automation technology

Mankind has always tried to make work easier through mechanisation and automation. Fascinating examples show how hard this development has sometimes been and how impressive the results can be.

Fundamentals of automation technology

This training module goes more deeply into practical examples. A manufacturing process previously carried out manually is automated: you learn about the parts (sensors, actuators) and processes (material flow, energy flow, signal flow) involved in an automated process.


Technology and ...

Technology and society have always been closely interwoven. This training module uses easy-to-understand examples to show how technology and society influence each other. The module also covers the limitations of technology – and possible negative impacts on society.

Training time: approx. 6 hours

E.g. single licence on CD-ROM with online activation DE/EN/ES/FR Order no. 540899 with network licence connector DE/EN/ ES/FR Order no. 540901

Further languages on request.

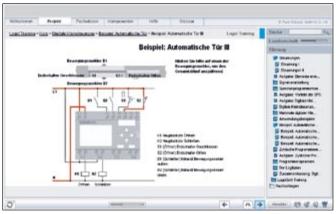

This training program provides an introduction to logic functions. First of all, AND & OR functions and their processing are shown in function tables. Other basic control functions such as memory, timer and counter functions round off the contents. The second part starts by covering the basics of open-and closed-loop control circuits and describes the elements of a controller. It then takes a detailed look at minicontrollers with their features and areas of application. From the contents:


- Basic technical functions (AND & OR function, memory function, timer function, counter function)
- Digital minicontrollers (differentiation between open- and closedloop control)
- Control components
- Positioning with digital minicontrollers
- Design and function of a minicontroller
- Cyclical programme processing
- Areas of application
- Programming languages

Training time: approx. 2 hours

E.g. single licence on CD-ROM		
with online activation DE/EN/ES/FR		
Order no.	540941	
with network licence connector DE/EN/		
ES/FR		
Order no.	540943	

Actuators – DC motor

Open- and closed-loop control

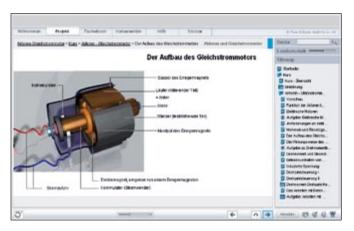


Using the everyday example of a car park access control system, the trainee learns the basics of a me-chatronic system.

Building on this, the training program determines what function the actuators have in the controller. A DC motor is then studied in more detail as an example of a typical actuator, e.g. its structure and the laws which govern its operation. Further chapters cover speed control and the use of data sheets as well as the transmission ratios which can be achieved by using a gearbox. From the contents:

- The function of actuators in mechatronic systems
- Electric motors
- DC motor
- Torque and current
- Behaviour of DC motors
- Induced voltage and speed control
- Characteristic torque/speed curve
- Working with data sheets
- Determining the transmission ratio

Training time: approx. 2 hours

E.g. single licence on C with online activation I		
Order no.	540953	
with network licence connector DE/EN/ ES/FR		
Order no	540955	

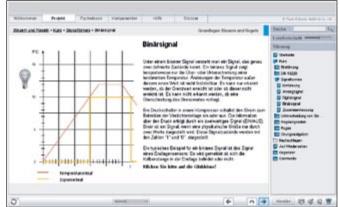

The training program uses practical examples to show the difference between open- and closed-loop control in automation. Easy-to-understand tasks are used first to examine the overall process of a simple functioning system. Later sections then look at different types of controllers, the different ways in which signals are represented and processed and the ways in which programs are implemented. From the contents:


- Differences between open- and closed-loop control (characteristics of controllers, characteristics of regulators
- DIN 19226
- Signal types
- Differences between types of control
- Signal processing (synchronous control, controlling links, asynchronous control, process control)
- Types of control (regulating to fixed values, tracking values)
- Regulators (P, I and D controllers, combined controllers such as PI or PID controllers)

Training time: approx. 2 hours

E.g. single licence on CD-ROM with online activation DE/EN/ES/FR		
Order no.	540947	
with network licence connector DE/EN/ ES/FR		
Order no.	540949	

Pneumatics

Electropneumatics

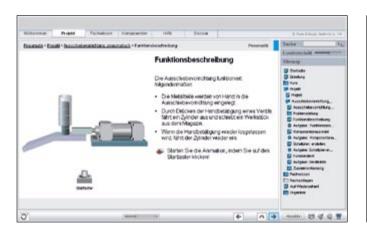

Everything on the subject of pneumatics in about 12 hours of learning. The program is divided into technical knowledge and coursework.

Technical knowledge

This interactive self-taught program covers the basics of pneumatic control. Participants learn to find practical and theoretical solutions to the key tasks of a basic course on pneumatics, e.g. as part of a basic vocational training course.

Course

In this course the theoretically acquired technical knowledge is reinforced. A wide range of exercise types makes the course interesting and successful: participants have to draw symbols and circuit diagrams, answer multiple-choice questions and set up and connect circuits in PC-based video clips. From the contents:

- Physical basics (units, properties, laws)
- Energy supply (production, preparation and distribution of compressed air)
- Circuit diagram (circuit diagram, symbols)
- Drive components (applications, linear drives, rotational drives)
- Valves (designs, directional valves, stop valves, pressure control valves, flow control valves, valve combinations, logic elements)
- Signalling components (manual
- signalling, endpoint detection)
- Additional requirements

Training time: approx. 12 hours

E.g. single licence on CD-ROM with online activation DE/EN/ES/FR Order no. 540911 with network licence connector DE/EN/ ES/FR

Order no. 540913 Further languages on request. The Electropneumatics training program builds on the Pneumatics training program and reinforces material already learned from practical projects. Starting with concrete industrial applications, fundamental electropneumatic circuits are produced. With the help of numerous exercises, learnt material will be revised, applied and further developed by you. During an exercise, the programme reacts to each answer with varying feedback.

0

The trainee is supported by the basic knowledge module, which provides fundamental knowledge on electropneumatics in a structured, systematic manner. In the components module, the structure, function and application of typical electropneumatic components is described. Various supporting materials are available to complete the exercise such as PDF documents, a variety of downloads and a comprehensive glossary. From the contents: – Advantages and drawbacks of

4

- electropneumatics
- Safety in electropneumatic circuits

0 4

- Fundamentals of electrical engineering
- Pneumatic circuit diagram
- Electrical circuit diagram
- Basic logic functions
- Direct and indirect electrical control, time and pressure dependent process controls
- Signal storage in the power and in the control unit, latching circuit
- Documentation for a control unit
- Maintenance and repair of electropneumatic systems
- Solenoid actuated valves
- Double-acting cylinders
- Electrical buttons and switches
- Sensors
- Relays and contactors, timed relays
- Pressure switch
 Standardised circuit diagrams, electrical and pneumatic circuit diagrams


Training time: approx. 12 hours

E.g. single licence on CD-ROM with online activation DE/EN/ES/FR		
Order no.	540923	
with network licence connector DE/EN/ ES/FR		
Order no.	540925	
E (1)		

Further languages on request.

Electrical engineering 1

Electrical engineering 2

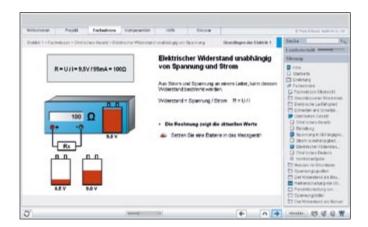

The "Electrical Engineering 1" training program is one of a series of new programs in the field of electrical engineering and electronics. These programs are practically oriented and authentically structured. Case studies from practice provide a concise illustration of the matters covered. All training content is taught by means of audio clips. Additionally, the narrative text can be viewed on the sitemap.

Trainees experience a regular exchange of input and output, with phases of presentation and explanation alternating with phases of activity and interaction. This enhances motivation and learning.

Progress monitoring exercises are scheduled after a maximum of five pages of learning. The aim of this is to have trainees repeat, apply and develop what they have learned themselves. Exercises are incorporated during teaching, at the end of each learning step and within the case studies. During an exercise, the program responds to each of the trainee's answers with the appropriate feedback.

Various tools are built-in to the training program, such as Excel worksheets, an integrated calculator, PDF files and various downloads. The training programs include an extensive glossary and a full text search facility.

Content extracts:

- Closed circuit
- Electrical conductivity - Units and symbols
- Ohm's Law
- Measuring in the circuit
- Voltage supplies
- The resistor as a component
- Series connection of resistors
- Parallel connection of resistors
- Voltage divider
- The resistor as a sensor
- Battery-powered screwdriver
- Measuring range extension
- Temperature controlled heating
- Level detection


Training time: approx. 4 hours

E.g. single licence on CD-ROM with online activation DE/EN/ES/FR Order no. 549623 with network licence connector DE/EN/ ES/FR Order no. 549625

Further languages on request.

The "Electrical Engineering 2" training program is one of a series of new training programs in the field of electrical engineering and electronics. These programs are practically oriented and authentically structured. Case studies from practice provide a concise illustration of the matters covered. All training content is taught by means of audio clips. Additionally, the narrative text can be viewed on the sitemap.

Various tools are built into the training program, such as Excel worksheets, an integrated calculator, PDF files and various downloads. The training programs include an extensive glossary and a full text search facility.

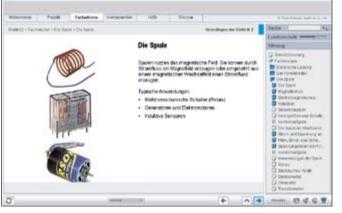

Content extracts:

- Electric charge
- Capacitor
- A capacitor in a DC circuit
- A capacitor in an AC circuit
- Applications of the capacitor
- Variable capacitor
- Coil
- A coil in a DC circuit
- A coil in an AC circuit
- Applications of the coil
- Physical variables
- Calculating with changing values
- Light switch-off delay
- Electrical behaviour of a grinder
- Power generation and transmission

Training time: approx. 4 hours

E.g. single licence on CD-ROM	Λ	
with online activation DE/EN	/ES/FR	
Order no.	549626	
with network licence connector DE/EN/		
ES/FR		
Order no.	549628	
Further languages on reques	t.	

Electronics 1

Electronics 2



The "Electronics 1" training program is one of a series of new programs in the field of electrical engineering and electronics. These programs are practically oriented and authentically structured. Case studies from practice provide a concise illustration of the matters covered. All training content is taught by means of audio clips. Additionally, the narrative text can be viewed on the sitemap.

Trainees experience a regular exchange of input and output, with phases of presentation and explanation alternating with phases of activity and interaction. This enhances motivation and learning.

Progress monitoring exercises are scheduled after a maximum of five pages of learning. The aim of this is to have trainees repeat, apply and develop what they have learned themselves. Exercises are incorporated during teaching, at the end of each learning step and within the case studies. During an exercise, the program responds to each of the trainee's answers with the appropriate feedback.

Various tools are built into the training program, such as Excel worksheets, an integrated calculator, PDF files and various downloads. The training programs include an extensive glossary and a full text search facility.

Content extracts:

- Semiconductor technology
- Diodes
- Bipolar transistors
- Field-effect transistors
- Regulated power supply
- Audio amplifier
- Audio amplifier with sound control


Training time: approx. 4 hours

E.g. single licence on CD-ROM with online activation DE/EN/ES/FR Order no. 549629 with network licence connector DE/EN/ ES/FR Order no.

549631

The "Electronics 2" training program is one of a series of new programs in the field of electrical engineering and electronics. These programs are practically oriented and authentically structured. Real case studies provide a concise illustration of the matters covered. All training content is taught using audio clips. Additionally, the narrative text can be viewed on the sitemap.

Various tools are built into the training program, such as Excel worksheets, an integrated calculator, PDF files and various downloads. The training programs include an extensive glossary and a full text search facility.

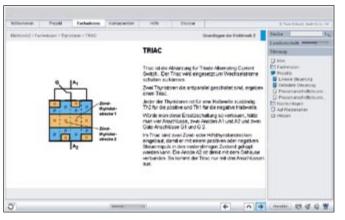

Content extracts:


- Signal types
- Integrated circuits
- Operational amplifier (OpAmp)
- AC voltage of various frequencies - Characteristic values of amplify-
- ing circuits
- Circuit technology of amplifiers
- Filters
- Bistable flip-flop
- Single flip-flop
- Sine wave generator
- Rectangle generator
- Thyristor-controlled drilling machine
- Brightness control with triac
- Adjusting the speed of an electric screwdriver

Training time: approx. 4 hours

E.g. single licence on CD-ROM			
with online activation DE/EN/ES/FR			
Order no.	549632		
with network licence connector DE/EN/			
ES/FR			
Order no.	549634		

Sensor technology 1

Sensor technology 2

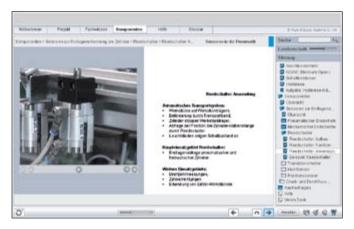

Sensors in pneumatics


This training program deals in detail with the sensors used to detect end position on cylinders and with pressure and flow sensors in pneumatic systems. Based on a complex example from industrial practice, trainees are taught to select suitable sensors. The necessary basic knowledge for this is provided in the Technical Knowledge and Components modules, to which they can refer at any time.

All training content is taught by means of audio clips. Additionally, the narrative text can be viewed on the sitemap. Content extracts:

- Project: Selection of sensors in one of the clamping units of a processing centre
- Advantages and disadvantages of various end position sensors on cylinders
- Simple displacement encoders on cylinders
- Use of pressure sensors to improve safety in pneumatic systems
- Use of flow sensors to safeguard system cycle times
- Output signals from sensors
- Connection technology
- NO/NC (Normally Open, Normally Closed)
- Switching functions
- Sensors for end position detection: Pneumatic and mechanical limit switch, reed switch, transistor switch, Hall sensor, position sensor
- Types of pressure measurement
 Sensors for pressure measurement: Mechanical pressure switch,
- electronic pressure sensor, – Sensors for flow measurement: Volumetric flow meter, effective
- pressure principle, ultrasonic flow meter, mass flow meter, heat-loss method

Training time: approx. 2 hours

E.g. single licence on CD-ROM with online activation DE/EN/ES/FR Order no. 549752 with network licence connector DE/EN/ ES/FR Order no. 549755

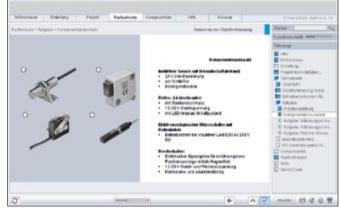

Sensors for object detection

This training program deals in detail with the sensors used to detect objects in automated systems. Based on a complex example from industrial practice, trainees are taught to select the suitable sensors. The necessary basic knowledge for this is provided in the Technical Knowledge and Components modules, to which they can refer at any time.

All training content is taught by means of audio clips. Additionally, the narrative text can be viewed on the sitemap. Content extracts:

- Project: Selection of sensors in a milk bottling plant
- Object detection in industrial practice
- Switching characteristics of proximity switches
- Hysteresis
- Connection technology: Two-wire technology, three-wire technology, four-wire technology
- NO/NC (Normally Open, Normally Closed)
- Inductive sensors: Construction and mode of operation, factor-1 sensors, special designs, flush fitting sensors, application examples
- Optical sensors: Diffuse sensor, through-beam sensor, retro-reflective sensor, background fade-out, fibre optic cable, light types, reflection types, adjustment, contrast sensor, colour sensor
- Capacitive sensors: Construction, mode of operation, usage and examples
- Ultrasonic sensors: Construction, mode of operation, applications

Training time: approx. 2 hours

E.g. single licence on CD-ROM		
with online activation DE/	EN/ES/FR	
Order no.	549758	
with network licence connector DE/EN/		
ES/FR		
Order no.	549761	

Technical book and workbook MecLab[®]

Supplementary print media



Technical book: Fundamentals of automation technology

The technical book deals with all essential fundamentals of automation technology in a compact form, specially adapted for the MecLab[®] training system for secondary schools.

Contents

- What is automation technology?

- How do engineers work?
- Fundamentals of electrical engineering
- Fundamentals of pneumatics
- Fundamentals of electrical drives
- Fundamentals of control technology

F. Ebel, S. Idler, G. Prede, D. Scholz,

A. Hüttner, R.	Pittschellis	
Edition 2008	106 nages	90 illustrations

Lannon 2000, 100 pages, 5	o mastrations,
bound	
DE	562069

DE Other languages on request.



Workbook: Teaching with MecLab®

The workbook describes the commissioning of the stations and provides information on how they are implemented in class.

Contents

- Didactic reasoning
- Significance and commissioning
- of the stacking magazine station – Significance and commissioning
- of the conveying station
- Significance and commissioning of the handling station
- Tips for lesson planning
- Project work

A. Hüttner, R. Pittschellis, M. Klaus, M. Hübsch, M. Striegel, T. Lust, J. Schwarz, F. Ebel Edition 2008. 86 pages. 50 illustrations.

Euliun 2000, oo pages, 50 mustrations,		
coloured, bound		
DE	562070	

Other languages on request.



Pneumatics, Basic level

This book is intended for basic training in pneumatic control technology and teaches physical fundamentals of pneumatics as well as the function and use of pneumatic components. Numerous diagrams facilitate and ensure comprehension. Pneumatic circuits are explained using examples. Model solutions and detailed explanations improve the student's knowledge of circuit design and sequences.

P. Croser, F. Ebel

Edition 2003, 280 pages,	bound
DE	93130
EN	93131
ES	94384
FR	93132



Electropneumatics, Basic level

This textbook represents an impressive synthesis of years of experience gained in Festo Didactic courses and the requirements of company and college training. It explains basic equipment and modern installation-saving components that require little maintenance. An extensive description of methods of representation showing motion sequences and circuit states makes complex circuits easy to understand. A detailed example provides students with the necessary knowledge for planning and implementing an electropneumatic circuit.

G. Pre	de, D. S	Scholz	
E 1977	2004	201	

Edition 2001, 296 pages, bound	
DE	91180
EN	91181
ES	90877
FR	90872

Supplementary print media



Practical knowledge: Basic pneumatic controllers

This booklet has been created for practitioners who need to implement small projects quickly and effectively. The various circuit examples facilitate the creation of many simple tasks. The examples shown are complementary. If something is not clear, the previous step can be referred to. This means that even those with little experience can quickly get to grips with the subject matter.

Reference work for circuit planning symbols

A detailed overview of the most important circuit planning symbols shows the structure of controllers and gives hints on the practical implementation of circuit diagrams that have been developed.

W. Braungard, P. Löbelenz, G. Mark Edition 2006, 80 pages, booklet DE 151508




Proximity sensors Textbook


This sensor textbook deals in detail with proximity sensors for handling and processing systems. The book can be used both to support basic and further training programs and for self-tuition. It is made up of a course section, a fundamentals section and a section with solutions to the exercises in the course section. The contents of the book are matched to the corresponding workbook while a glossary of keywords provides rapid access to information on particular types of sensors.

F. Ebel, S. Nestel Edition 2003, 278 pages, bound DE 93045 EN 93046

94342

ES

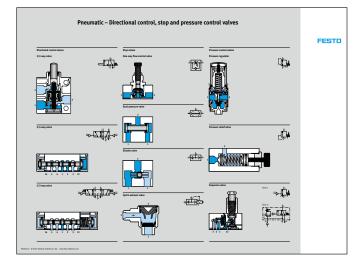

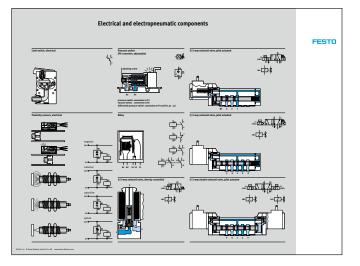

Everything that you need to know: 5 posters on pneumatics

Now the updated version of the popular A1 poster is supplied rolled up, quickly providing a comprehensive overview. All symbols and terminology correspond to the current standards ISO 1219-2 and DIN/EN 61346-2. Subjects on the poster:

- Electrical, pneumatic and logic symbols
- Systematic control diagram of a pneumatic control system
- Electrical and electropneumatic components
- Pneumatic Directional control, stop and pressure control valves

-	Pneumat	tic – Power	components	

DE	193129
EN	551015
ES	551014
FR	551013

Festo worldwide

Argentina

Festo S.A. Edison 2392 (B1640 HRV) Martinez Prov. Buenos Aires Tel. ++54 (0)11/47 17 82 00, Fax 47 17 82 82 E-mail: info@ar.festo.com

Australia

Festo Pty. Ltd. Head Office (Melbourne) 179-187 Browns Road, P.O. Box 261 Noble Park Vic. 3174 NODIE PATK VIC. 31/4 Call Toll Free 1300 88 96 96 Fax Toll Free 1300 88 95 95 Tel. ++ 61(0)3/97 95 95 55, Fax 97 95 97 87 E-mail: info_au@festo.com.au

Austria Festo Gesellschaft m.b.H. Linzer Straße 227 1140 Wien Tel. ++43 (0)1/9 10 75-0, Fax 9 10 75-250 E-mail: automation@festo.at

Belarus IP Festo Minsk, 220035 Mascherov Prospekt, 78 Belarus Tel. ++375 (0)17/204 85 58, Fax 204 85 59 E-mail: info by@festo.com

Belgiu Festo Belgium sa/nv Rue Colonel Bourg 101 1030 Bruxelles/Brussel Tel. ++32 (0)2/702 32 11, Fax 702 32 09 E-mail: info_be@festo.com

Brazil Festo Automação Ltda. Rua Guiseppe Crespi, 76 KM 12,5 - Via Anchieta Nm 12,) - Vid AllChleta 04183-080 São Paulo SP-Brazíl Tel. ++55 (0)11/50 13 16 00, Fax 50 13 18 68 E-mail: info_br@festo.com

Bulgaria Festo EOOD

1592 Sofia 9. Christophor Kolumb Blvd. Tel. ++359 (0)2/960 07 12, Fax 960 07 13 E-mail: info_bg@festo.com

Canada Festo Inc. 5300 Explorer Drive Mississauga, Ontario L4W 5G4 Tel. ++1 (0)905/624 90 00, Fax 624 90 01 E-mail: info_ca@festo.com

Chile Festo S.A. Mapocho 1901 6500151 Santiago de Chile Tel. ++56 (0)2/690 28 00, Fax 695 75 90 E-mail: info.chile@cl.festo.com

China Festo (China) Ltd. 1156 Yunqiao Road Jinqiao Export Processing Zone Pudong, 201206 Shanghai, PRC Tel. ++86 (0)21/28 54 90 01, Fax 58 54 03 00 E-mail: info_cn@festo.com

Colombia Festo Ltda Avenida El Dorado No. 98-43 Bogotá Tel. ++57 (0)1/404 80 88, Fax 404 81 01 E-mail: festo@festo.com.co

Croatia Festo d.o.o. Nova Cesta 181 10000 Zagreb Tel. ++385 (0)1/619 19 69, Fax 619 18 18 E-mail: info_hr@festo.com

Czech Republic Festo, s.r.o. Modøanská 543/76 147 00 Praha 4 Tel. ++420 261 09 96 11, Fax 241 77 33 84 E-mail: info_cz@festo.com

Denmark Festo A/S Islevdalvej 180 2610 Rødovre Tel. ++45 70 21 10 90, Fax ++45 44 88 81 10 E-mail: info_dk@festo.com

Estonia Festo OY AB Eesti Filiaal Laki 11B 12915 Tallinn Tel. ++372 666 15 60, Fax ++372 666 15 61 E-mail: info_ee@festo.com

Finland Finano Festo OY Mäkituvantie 9, P.O. Box 86 01511 Vantaa Tel. ++358 (09)/87 06 51, Fax 87 06 52 00 E-mail: info_fi@festo.com

France

Festo Eurl Numéro Indigo Tel. 0820/204640, Fax 204641 ZA des Maisons Rouges 8 rue du Clos Sainte Catherine 94367 Bry-sur-Marne cedex Tel. ++33 (0)1/48 82 64 00, Fax 48 82 64 01 E-mail: info_fr@festo.com

Germany Festo Didactic GmbH & Co. KG Postfach 10 07 10 73707 Esslingen Rechbergstraße 3 73734 Esslingen Tel. ++49 (0)711/3467-0 Fax ++49 (0)711/347-54 88500 E-mail: did@de.festo.com

Greece

Festo Ltd. 40 Hamosternas Ave. 11853 Athens Tel. ++30 210/341 29 00, Fax 341 29 05 E-mail: info_gr@festo.com

Hong Kong Festo Ltd. Unit C&D, 7/F, Leroy Plaza 15 Cheung Shun Street Cheung Sha Wan, Kowloon Hong Kong Tel. ++ 852/27 43 83 79, Fax 27 86 21 73

Hungary Festo Kft. Csillaghegyi út 32-34. 1037 Budapest Tel. ++36 1/436 51 11, Fax 436 51 01 E-mail: info_hu@festo.com

India Festo Controls Private Ltd. 237B, Bommasandra Industrial Area, Bangalore Hosur Highway, Bangalore 560 099 Tel. ++91 (0)80/22 89 41 00, Fax 783 20 58 E-mail: info_in@festo.com

Indonesia PT. Festo JL. Sultan Iskandar Muda No.68 Arteri Pondok Indah lakarta 12240 Tel. ++62 (0)21/27 50 79 00, Fax 27 50 79 98 E-mail: info_id@festo.com

Iran Festo Pneumatic S.K. # 2, 6th street, 16th avenue, # 2, oin Suber, Touri avenue, Tehran 1581975411 Km 8, Special Karaj Road, P.O.Box 15815-1485 Tehran 1389793761 Tel. ++98 (0)21 44 52 24 09, Fax ++98 (0)21 44 52 24 08 E-mail: Mailroom@festo.ir

Ireland Festo Limited Unit 5 Sandyford Park Sandyford Industrial Estate Dublin 18 Tel. ++ 353(0)1/295 49 55, Fax 295 56 80 E-mail· info_ie@festo.com

Israel Festo Pneumatic Israel Ltd. P.O. Box 1076, Ha'atzma'ut Road 48 Yehud 56100 Tel. ++972 (0)3/632 22 66, Fax 632 22 77 E-mail: info_il@festo.com

Italy Festo S.p.A

Via Enrico Fermi 36/38 20090 Assago (MI) Tel. ++39 02/45 78 81, Fax 488 06 20 E-mail: info_it@festo.com

Japan Festo K.K. 1-26-10 Hayabuchi, Tsuzuki-ku Yokohama 224-0025 Tel. ++81 (0)45/593 56 10, Fax 593 56 78

Korea South

Latvia Festo SIA Deglava 60

Lithuania Festo UAB Karaliaus Mindago pr. 22 3000 Kaunas Tel. ++370 (8)7/32 13 14, Fax 32 13 15

10 Persiaran Industri Bandar Sri Damansara, Wilayah Persekutuan 52200 Kuala Lumpur Tel. ++60 (0)3/62 86 80 00, Fax 62 75 64 11 E-mail: info_my@festo.com

Av. Ceylân 3 Col. Tequesquinahuac 54020 Tlalnepantla, Edo. de México Tel. ++52 (01)55/53 21 66 00, Fax 53 21 66 55 E-mail: festo.mexico@mx.festo.com

Festo B.V. Schieweg 62 2627 AN Delft Tel. ++31 (0)15/251 88 99, Fax 261 10 20 E-mail: info@festo.nl

Auckland NZ Tel. ++64 (0)9/574 10 94, Fax 574 10 99 E-mail: info_nz@festo.com

Tel. ++234 (0)1/794 78 20. Fax 555 78 94

Ole Deviks vei 2 Ole66 Oslo, Norway Tel. ++47 22 72 89 50, Fax ++47 22 72 89 51

Peru Festo S.R.L. Calle Amador Merino Reyna #480, San Isidro Lima. Perú Tel. ++51 (0)1/222 15 84, Fax 222 15 95

Finippines Festo Inc. KM 18, West Service Road South Superhighway 1700 Paranaque City, Metro Manila Tel. ++63 (0)2/776 68 88, Fax 823 42 19

Janki k/Warszawy, ul. Mszczonowska 7 05090 Raszyn Tel. ++48 (0)22/711 41 00, Fax 711 41 02

St. Constantin 17 010217 Bucuresti

119607 Moskow Tel. ++7 495/737 34 00, Fax 737 34 01 E-mail: info_ru@festo.com

Singapore Festo Pte. Ltd 6 Kian Teck Way Singapore 628754 Tel. ++65/62 64 01 52, Fax 62 61 10 26 E-mail: info_sg@festo.com

Slovakia

Festo spol. s r.o Gavlovicová ul. 1 83103 Bratislava 3 Tel. ++421 (0)2/49 10 49 10, Fax 49 10 49 11 E-mail: info_sk@festo.com

Slovenia Festo d.o.o. Ljubljana IC Trzin, Blatnica 8 1236 Trzin Tel. ++386 (0)1/530 21 00, Fax 530 21 25 E-mail: info_si@festo.com

South Africa Festo (Pty) Ltd. 22-26 Electron Avenue, P.O. Box 255 Isando 1600 Tel. ++27 (0)11/971 55 00, Fax 974 21 57 E-mail: info_za@festo.com

Spain Festo Pneumatic, S.A. Tel. 901243660 Fax 902243660 Avenida Granvia, 159 Distrito económico Granvia L'H ES-08908 Hospitalet de Llobregat, Barcelona Tel. ++ 3493/261 64 00, Fax 261 64 20 E-mail: info_es@festo.com

Sweden Festo AB Stillmansgatan 1, P.O. Box 21038 20021 Malmö Tel. ++46 (0)40/38 38 40, Fax 38 38 10 E-mail: info_se@festo.com

Switzerland Festo AG Moosmattstrasse 24 8953 Dietikon ZH Tel. ++41 (0)44/744 55 44, Fax 744 55 00 E-mail: info_ch@festo.com

Taiwan Festo Co., Ltd. Head Office 24450, No. 9, Kung 8th Road Linkou 2nd Industrial Zone Linkou Hsiang, Taipei Hsien, Taiwan, R.O.C. Tel. ++886 (0)2 26 01 92 81, Fax ++886 (0)2 26 01 92 86-7 E-mail: festotw@festo.com

Thailand Festo Ltd. 67/1 Moo 6 Phaholyothin Road Klong 1, Klong Luang, Pathumthani 12120 Tel. ++66 29 01 88 00, Fax ++66 29 01 88 33 E-mail: info_th@festo.com

Turkey Festo San. ve Tic. A.S. Tuzla Mermerciler Organize Sanayi Bölgesi, 6/18 TR 34956 Tuzla - Istanbul/TR Tel. ++90 (0)216/585 00 85, Fax 585 00 50 E-mail: info tr@festo.com

Ukraine Festo Ukraina Borisoglebskaja 11 Kiev 04070 Tel. ++380 (0)44/239 24 33, Fax 463 70 96 E-mail: info_ua@festo.com

United Kingdom

Festo Limited Applied Automation Centre, Caswell Road Brackmills Trading Estate Northampton NN4 7PY Tel. ++44 (0)1604/66 70 00, Fax 66 70 01 E-mail: info_gb@festo.com

United States

Festo Corporation (New York) Call Toll-free 800/993 3786 Fax Toll-free 800/963 3786 395 Moreland Road, P.O.Box 18023 Hauppauge, N.Y. 11788 Tel. ++ 1(0)314/770 01 12, Fax 770 16 84 E-mail: info_us@festo.com

Venezuela

Festo C.A. Av. 23, Esquina calle 71, No. 22-62 Maracaibo, Edo, Zulia Tel. ++58 (0)261/759 09 44, Fax 759 04 55 E-mail: festo@festo.com.ve

E-mail: info ip@festo.com

Festo Korea Co., Ltd. 470-1 Gasan-dong, Geumcheon-gu Seoul #153-803 Tel. ++82 (0)2/850 71 14, Fax 864 70 40 E-mail: info_kr@festo.com

1035 Riga Tel. ++371 67/57 78 64, Fax 57 79 46 E-mail: info_lv@festo.com

E-mail: info_lt@festo.com Malaysia Festo Sdn.Berhad

Mexico Festo Pneumatic, S.A. Av. Ceylán 3

Netherlands

New Zealand Festo Limited MT. Wellington

Nigeria Festo Automation Ltd. Motorways Centre, First Floor, Block C Alausa, Ikeja, Lagos, NIGERIA

E-mail: info@ng-festo.com Norway Festo AS

E-mail: info no@festo.com

Philippines

Poland Festo Sp. z o.o. E-mail: info pl@festo.com

Romania Festo S.R.L.

Tel. ++40 (0)21/310 29 83, Fax 310 24 09 E-mail: info_ro@festo.com

Russia Russia Festo-RF 000 Michurinskiy prosp., 49

E-mail: info_ph@festo.com